

TOSHIBA

42/51WH46 Series

Owner's Manual



true
experience

Contents



SETTING UP

Safety precautions – Some <i>do's</i> and <i>don'ts</i> for you to be aware of	3
Installation and important information	4
The remote control – an at-a-glance guide	5
Connecting external equipment – a guide to connecting equipment to the back of the television	6
Connections and controls – switching on the television, standby, using the controls, headphone socket, connecting equipment to the front/side of the television	7
Selecting the language, country and system	8
Auto tune	8
Manual tune – an alternative to <i>Auto tune</i> , tuning a programme position for a VCR, direct entry of channels	9
Programme skip	10
Manual fine tuning	11
Programme sorting	11

CONTROLS AND FEATURES

General controls – changing programme position	12
Sound controls – volume, sound mute, bass boost, super woofer, bass/treble/balance	12
Stereo and bilingual transmissions – stereo or dual language broadcasts	12
Widescreen viewing	13
Picture controls – picture preferences (contrast, brightness, colour, tint, sharpness), noise reduction (NR), black stretch, colour temperature	14
Picture controls – convergence, picture position, automatic format (Widescreen), still picture	15
The timer and time display – setting the television to turn on and off, time display	16
Panel lock and blue screen – disabling the buttons on the television, blue screen	16
Input selection and AV connections – input and output sockets for connected equipment	17

TELETEXT

Setting up, general information, Auto. and LIST modes	18
Control buttons	19

PROBLEM SOLVING

Questions and Answers – answers to some of the more common queries including colour system	20
---	----

INFORMATION

Notes – for your own records	22
Specifications and accessories – technical information about the television, supplied accessories	24

Safety Precautions

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken to obtain the best results and for safety to be assured. Please read the points below for your own safety. They are of a general nature, intended to help with all electronic consumer products and some points may not apply to the goods you have just purchased.

Air Circulation

Leave at least 10cm clearance around the television to allow adequate ventilation. This will prevent overheating and possible damage to the television. Dusty places should also be avoided.

Heat Damage

Damage may occur if the television is left in direct sunlight or near a heater. Avoid places subject to extremely high temperatures or humidity, or locations where the temperature is likely to fall below 5°C (41°F).

Mains Supply

The mains supply required for this equipment is 230v AC 50Hz. Never connect to a DC supply or any other power source. DO ensure that the television is not standing on the mains lead. DO NOT cut off the mains plug from this equipment, this incorporates a special Radio Interference Filter, the removal of which will impair its performance. In the UK, the fuse fitted in this plug is approved by ASTA or BSI to BS1362. It should only be replaced by a correctly rated and approved type and the fuse cover must be refitted.

IF IN DOUBT PLEASE CONSULT A COMPETENT ELECTRICIAN.

Do

DO read the operating instructions before you attempt to use the equipment.

DO ensure that all electrical connections (including the mains plug, extension leads and inter-connections between pieces of equipment) are properly made and in accordance with the manufacturers' instructions. Switch off and withdraw the mains plug before making or changing connections.

DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

DO be careful with glass panels or doors on equipment.

Do not

DONT remove any fixed cover as this may expose dangerous voltages.

DONT obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment.

DONT allow electrical equipment to be exposed to dripping or splashing or objects filled with liquids, such as vases, to be placed on the equipment.

DONT place hot objects or naked flame sources, such as lighted candles or nightlights on, or close to equipment. High temperatures can melt plastic and lead to fires.

DONT use makeshift stands and NEVER fix legs with wood screws. To ensure complete safety, always fit the manufacturers' approved stand or legs with the fixings provided according to the instructions.

DONT listen to headphones at high volume, as such use can permanently damage your hearing.

DONT leave equipment switched on when it is unattended, unless it is specifically stated that it is designed for unattended operation or has a standby mode. Switch off using the switch on the equipment and make sure your family know how to do this. Special arrangements may need to be made for infirm or handicapped people.

DONT continue to operate the equipment if you are in any doubt about it working normally, or it is damaged in any way – switch off, withdraw the mains plug and consult your dealer.

ABOVE ALL – NEVER let anyone, especially children, push anything into holes, slots or any other openings in the case – this could result in a fatal electric shock.

NEVER guess or take chances with electrical equipment of any kind – it is better to be safe than sorry.

TO FULLY DISCONNECT THE TELEVISION, SWITCH OFF THE MAINS SOCKET AND REMOVE THE POWER PLUG.

Installation and important information

Where to install

Locate the television away from direct sunlight and strong lights, soft, indirect lighting is recommended for comfortable viewing. Place the television directly on the floor or a sturdy platform. The mounting surface should be flat and steady, it should then be secured to the wall with a sturdy tie using the hook on the back of the television, this will prevent it from falling over.

If you install the television onto a soft floor covering, make sure that the covering will not be damaged by the weight of the television. Always take great care when moving this television as it could mark polished floor surfaces or damage floor coverings. Use curtains or blinds to prevent direct sunlight falling on the screen.

Make sure the television is located in a position where it cannot be pushed or hit by objects and that small items cannot be inserted into slots or openings in the case.



Cleaning the screen and cabinet...

Turn off the power, clean the screen and cabinet with a soft, dry cloth. We recommend that you **do not** use any proprietary polishes or solvents on the screen or cabinet as this may cause damage.

Disposal...

When the television reaches the end of its useful life please dispose of it in accordance with Local Government Regulations or at a recycling centre.

Please take note

EXCLUSION CLAUSE

Toshiba shall under no circumstances be liable for loss and/or damage to the product caused by:


- i) fire;
- ii) earthquake;
- iii) accidental damage;
- iv) intentional misuse of the product;
- v) use of the product in improper conditions;
- vi) loss and/or damage caused to the product whilst in the possession of a third party;
- vii) any damage or loss caused as a result of the owner's failure and/or neglect to follow the instructions set out in the owner's manual;
- viii) any loss or damage caused directly as a result of misuse or malfunction of the product when used simultaneously with associated equipment;

Furthermore, under no circumstances shall Toshiba be liable for any consequential loss and/or damage including but not limited to the following, loss of profit, interruption of business, the loss of recorded data whether caused during normal operation or misuse of the product.


If stationary images generated by teletext, channel identification logos, computer displays, video games, on screen menus, etc. are left on the television screen for any length of time they could become conspicuous, it is always advisable to reduce both the brightness and contrast settings.

The remote control

Simple at-a-glance reference of your remote control.

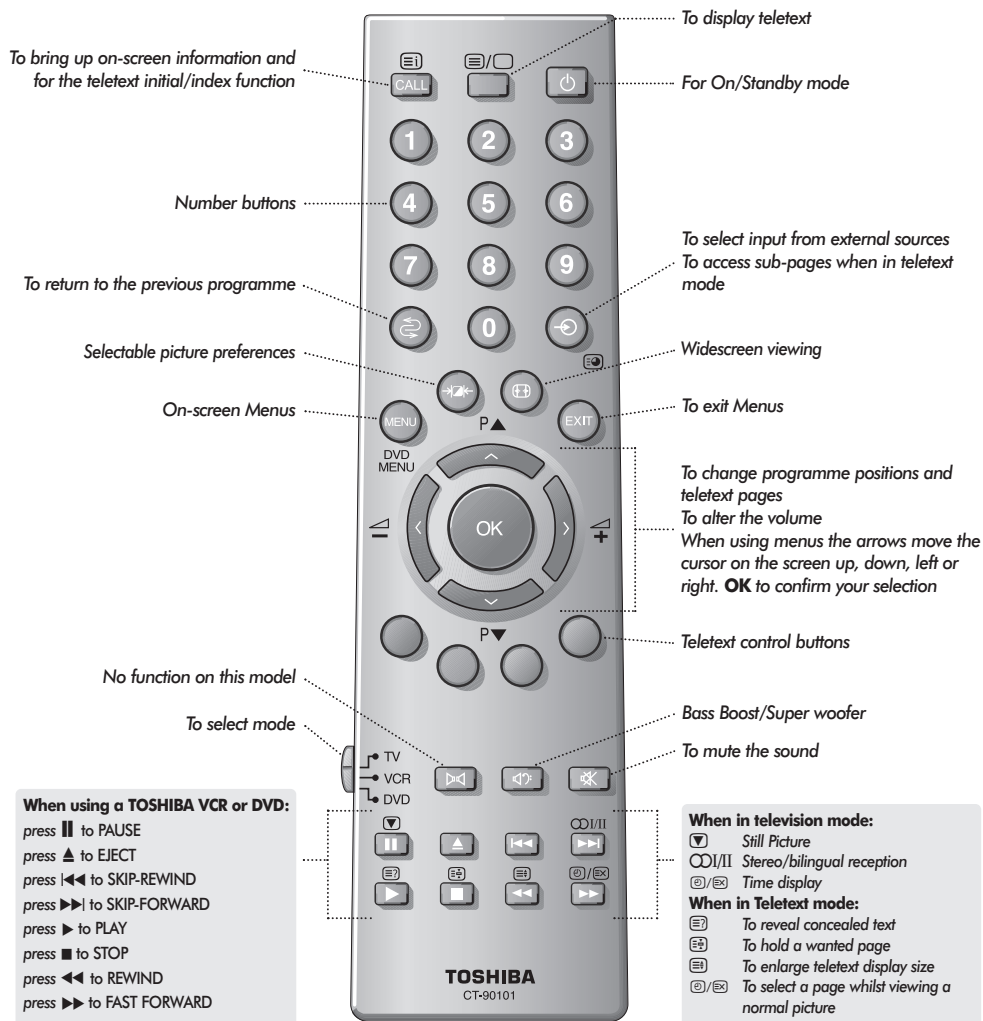

Inserting batteries and effective range of the remote

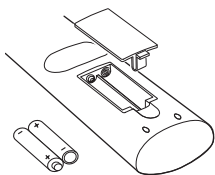

Remove the back cover to reveal the battery compartment and make sure the batteries are inserted the right way round.


Suitable battery types for this remote are UM-4, AAA, IEC R03 1.5V.

Do not combine a used, old battery with a new one or mix battery types. Dispose of them in a designated disposal area.

The performance of the remote control will deteriorate beyond a distance of five metres or outside an angle of 30 degrees from the centre of the television.

Connecting external equipment

Before connecting any external equipment, turn off all main power switches. If there is no switch remove the mains plug from the wall socket.

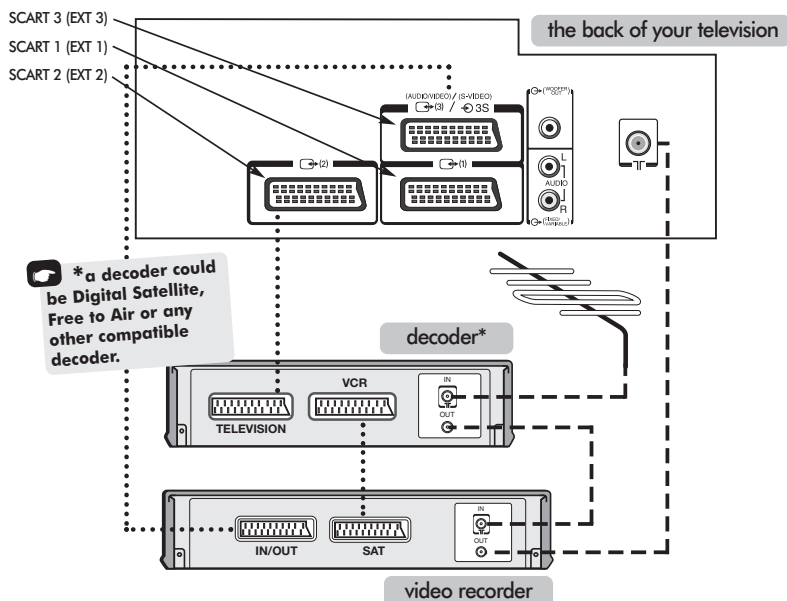

WE RECOMMEND THAT YOU USE SCART LEADS IN ADDITION TO AERIAL CABLES WHEREVER POSSIBLE

Aerial cables:

Connect the aerial to the socket on the rear of the television. If you use a decoder* and/or a video recorder it is essential that the aerial cable is connected through the decoder and/or through the video recorder to the television.

SCART leads:

Connect the video recorder **IN/OUT** socket to the television. Connect the decoder **television** socket to the television. Connect the video recorder **SAT** socket to the decoder **VCR** socket.

Before running **Auto tuning** put your decoder and video recorder to **Standby**.

The phono sockets will accept L and R audio signals.

In addition there is a fixed/variable external audio output which enables the connection to a suitable Hi-Fi unit, make sure the **Speaker** option in the **Sound** menu is set to **Off**.

A wide variety of external equipment can be connected to the back of the television, therefore the relevant owners manuals for *all* additional equipment *must* be referred to.

We recommend SCART 1 for a decoder, SCART 2 for additional equipment (games console etc.) and SCART 3 for a VCR.

If connecting S-VIDEO equipment, set the **INPUT** for **EXT3**. See page 17.

If the television automatically switches over to monitor external equipment, return to normal television by pressing the desired programme position button.


To recall external equipment, press to select between **EXT1**, **EXT2**, **EXT3**, or **EXT4**.

Connections and controls


A wide variety of external equipment can be connected via the sockets located on the side/front of the television.

Whilst all the necessary adjustments and controls for the television are made using the remote control, the buttons on the television may be used for some functions.

42WH46

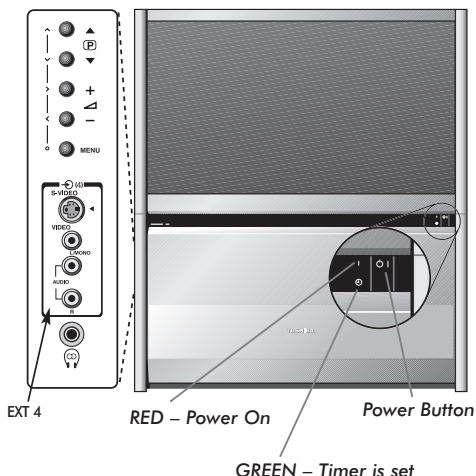

51WH46

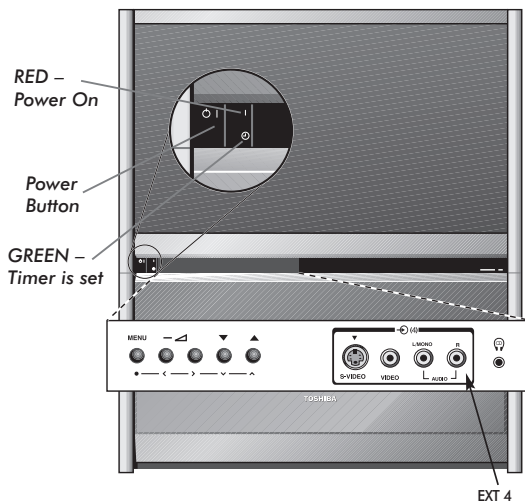

Switching on

If the power-on light is unlit press the **POWER** button on the front of the television to switch the television on, then press a number button on the remote control to see the screen.

To put the television into Standby press **POWER** on the remote control. To view the television press **POWER** again or any of the number buttons. The picture may take a few seconds to appear. Standby should only be used for short periods of time.

To set up the television you will now need to use the on-screen menus. Press the **MENU** button on the remote control to see the menus.

The menu bar at the top of the screens will show five different topics shown in symbols. As each symbol is selected by pressing the **LEFT** or **RIGHT** button on the remote control, its respective options will appear below.

To use the options press the **UP** or **DOWN** button on the remote control to move through them and **OK**, **LEFT** or **RIGHT** to select the required choice. Follow the on screen instructions. The functions of each menu are described in detail throughout the manual.

Using the controls and connections

To alter the volume press **MIN** **▲** **+**.

To alter the programme position press **▼** **(P)** **▲**.

Press **MENU** and **LEFT**, **RIGHT**, **UP** or **DOWN** to control the sound and picture options.

Press **MENU** to finish.

When connecting mono sound equipment to **EXT 4**, connect the audio output of the equipment to the L/Mono socket on the television.

To select the Input, press **INPUT** until the display shows **EXT4** as described on page 17. The television will automatically sense the type of signal.

Please always refer to the owner's manual of the equipment to be connected for full details.

Please note: Inserting the headphone jack will mute the sound from all speakers.

Selecting the language, country and system, Auto tune

Before running Auto tune put your decoder and video recorder (VCR) to **Standby** if they are connected. To set up the television use the buttons on the remote control as detailed on page 5.

- 1 To choose the required language, press **MENU** and use **>** to select **SET UP** from the top bar.



- 2 Press **✓** to highlight **Language**.

SET UP

Language	English
Country	UK
Auto tuning	
Manual tuning	
Programme sorting	
AV connection	
Horizontal position	
Convergence	

EXIT : To exit

- 3 Press **<** or **>** to select.
- 4 Choose your country from the options available. Press **✓** to highlight **Country**. Then **<** or **>** to select. The television will now tune the stations for your country.
- 5 Now press **✓** to highlight **Auto tuning**, then **>** to select.

SET UP

Language	English
Country	UK
Auto tuning	
Manual tuning	

- 6 Your **System** will have been selected, if there is a choice, please select from the systems displayed.

For UK only: Press **OK** to start and go to step 8.

B/G – Continental Europe, **I** – UK
D/K – Eastern Europe, **L1**, **L2** – France

Auto tuning

Previous settings
will be lost!
Press **EXIT** for no change.

System ◀ I ▶
START ▶

EXIT : To exit

- 7 Press **>** to select your **System**. Press **✓** to highlight **START** and then **>**.
- 8 The search will begin for all available stations. **▶▶▶** will flash and the bullet will move along the line as the search progresses.

You must allow the television to complete the search.

Auto tuning

Searching ▶▶▶ Ch. 25
 Channel : 22
 Station : BBC1

EXIT : To exit

- 9 When the search is complete the television will automatically return to programme position 1. This may not be a clear picture or the signal may be weak, so the station order may be changed by using **Programme sorting**, on page 11.

If the television cannot be connected to a VCR/decoder with a SCART lead or if a station on another **system** is required, use **Manual tuning** to allocate a programme position, see page 9.

Manual tune

The television can be tuned-in manually using **Manual tuning**. For example: if the television cannot be connected to a VCR/decoder with a SCART lead or to tune-in a station on another **System** (see page 8).

Use **<** and **>** to move across the screen and select any of these Manual Tune options.

Programme	System	Colour	Search	Programme skip	Channel	Manual fine tuning	Station
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Programme: The number to be pressed on the remote control.

System: Specific to certain areas. See step 4 on page 8.

Colour system: Factory set to Auto, should only be changed if problems are experienced, i.e. NTSC input from external source.

Search: Search up and down for a signal.

Programme skip: * means nothing has been stored or the facility to skip the channel is ON. See page 10.

Channel: The channel number on which a station is being broadcast.

Manual fine tuning: Only used if interference/weak signal is experienced. See page 11.

Station: Station identification. Use the **^** or **v** and **<** or **>** buttons to enter up to seven characters.

To allocate a programme position on the television for a decoder and VCR: turn the decoder on, insert a pre-recorded tape in the VCR and press PLAY, then manually tune.

- Press **MENU** and using **<** or **>** select the **SET UP** menu, with **v** highlight **Manual tuning**, press **>** to select.

SET UP

Language	<	English	>
Country	<	UK	>
Auto tuning			>
Manual tuning			>
Programme sorting			>
AV connection			>
Horizontal position	<		>
Convergence			>

EXIT : To exit

- Use **^** or **v** to highlight the programme position required e.g. we suggest **Prog. 0** for a VCR.

Manual tuning

Prog.	Sys.	Channel	Station
0	I	60	VCR
1	I	22	BBC1
2	I	28	BBC2
3	I	25	ITV
4	I	32	CH4
5	I	* 69	

OK : To select

EXIT : To exit

Different Channel numbers may be displayed

- Press **OK** to select. If the programme is skipped, **Programme skip** must be removed before storing.

Manual tuning

System
0 I A 60 0 VCR

OK : To store

MENU : To return

EXIT : To exit

- Press **>** to select **System** and use **^** or **v** to change (if required, see step 4 on page 8).
- Then press **>** to select **Search**.
- Press **^** or **v** to begin the search. **Search** will appear and the television will show the channel numbers.

Manual tuning

Searching
0 I A >>> 32 0

OK : To store

MENU : To return

EXIT : To exit

Manual tune continued

Programme skip

- 7** Each signal will show on the television, if it is not your VCR, press \wedge or \vee again to restart the search.
- 8** When your VCR signal is found, press \rightarrow to move along to **Station**. With \wedge , \vee , \leftarrow and \rightarrow put in the required characters, e.g. **VCR**.

Manual tuning

Station

0	I	A		39	0	VCR
---	---	---	--	----	---	-----

OK : To store
 MENU : To return
 EXIT : To exit

- 9** Press **OK** to store.
- 10** Repeat for each **programme position** you want to tune or, press **MENU** to return to the list of channels and select the next number to tune.
- 11** Press **EXIT** when you have finished.
- 12** To name external equipment, e.g. DVD on EXT2, press \odot to select **EXT2**, then select **Manual setting** from the **SET UP** menu.
- 13** Press \rightarrow to select **Label** then using \wedge , \vee , \leftarrow and \rightarrow put in the required characters.

Manual setting

Label

EXT 2	A	DVD
-------	---	-----

OK : To store
 MENU : To return
 EXIT : To exit

- 14** Press **OK** and then **EXIT**. When **EXT2** is next selected it will show on the screen as **EXT2 DVD**.

PLEASE NOTE

This television has direct channel entry if the channel numbers are known.

Select the **Manual tuning** screen in **Step 3**. Enter the **Programme number**, the **System**, then the **Channel** number. Press **OK** to store.

Programme skip

To prevent certain programmes from being viewed, the programme position can be skipped. The remote control must be removed as the channels will still be available using \wedge and \vee . The television can then be watched as normal using the controls on the side/front, but the television will not show the skipped programme position.

- 1** Select **Manual tuning** from the **SET UP** menu.

Manual tuning

Prog.	Sys.	Channel	Station
0	I	60	VCR
1	I	22	BBC1
2	I	28	BBC2
3	I	25	ITV
4	I	32	CH4
5	I	* 69	

OK : To select
 EXIT : To exit

- 2** Use \wedge or \vee to highlight the programme position to be skipped and press **OK** to select.
- 3** Press \rightarrow to select **Programme skip**.
- 4** Use \wedge or \vee to turn **Programme skip : On**. Press **OK**.

* on the screen indicates a skipped programme position.

Manual tuning

Programme skip : On

2	I	A	* 28	0	BBC2
---	---	---	------	---	------

OK : To store
 MENU : To return
 EXIT : To exit

- 5** Press **MENU** and repeat from **Step 2** or press **EXIT**.

Each programme position has to be *individually* selected. To turn **Programme skip** off, repeat the procedure for each position.

Skipped programme positions **cannot** be selected by **P▲** (\wedge) and **P▼** (\vee) or by the controls on the side/front of the television, but can still be accessed by the number buttons on the remote control.

Manual fine tuning, Programme sorting

Manual fine tuning

Manual fine tuning should not be required unless there is interference or a weak signal.

- 1 Select the **Manual tuning** menu. Highlight the station and press **OK**, then press **➤** to select **Manual fine tuning**.
- 2 Using **▲** or **▼** adjust to get the best picture and sound. Press **OK** and then **EXIT**.

Manual tuning

Manual fine tuning

1 I A 22 + 2 BBC1

OK : To store

MENU : To return

EXIT : To exit

Sorting programme positions

Programme sorting is an easy way of storing each channel on the programme position of your choice, or changing the station order if the picture is not clear.

- 1 Select **Programme sorting** from the **SET UP** menu. Press **➤**.

SET UP

Language ◀ English ▶
Country ◀ UK ▶
Auto tuning ▶
Manual tuning ▶
Programme sorting ▶
AV connections ▶
Horizontal position ◀◀
Convergence ▶

EXIT : To exit

- 2 The list of stations is now showing. With **▼** or **▲** highlight the station you want to move and press **OK**.

The selected station will be moved to the right of the screen.

Programme sorting

Prog.	Channel	Station
1		▲ 22 BBC1
2	28	◀ BBC2
3	25	ITV
4	32	CH4
5	* 69	
6	* 69	▼

OK : To set

EXIT : To exit

- 3 Use **▼** or **▲** to move through the list to your preferred position. As you do so the other stations will move to make room.
- 4 Press **OK** to set your move.
- 5 Repeat as necessary, then press **EXIT**.

General and sound controls, stereo/bilingual transmissions

Selecting programme positions

To select a programme position use the numbered buttons on the remote control.

For programme positions below 10 use 0 and the required number e.g. 01 for programme position 1.


Programme positions can also be selected using **P▲** (▲) and **P▼** (▼).

To revert to the previous programme position press .

To display on-screen information i.e. programme position, input mode or stereo/mono signal, press **CALL**.

Sound controls



Volume

Press  (◀) or  (▶) to adjust the volume.


Sound Mute

Press  once to turn the sound off and again to cancel.

Bass Boost – to enhance the depth of sound

Press  then ◀ or ▶ to adjust the effect. The difference will only be noticeable on sound with a strong bass. Press  again to turn Bass Boost off.

Super Woofer

When an active Super Woofer is connected (to the Woofer Out connection on the back of the television) pressing  will control it only if **Woofer Ext.** is chosen. Select **AV connection** in the **SET UP** menu, press ▼ until **Woofer** is highlighted then press ◀ or ▶ to choose **Ext.**

Bass, Treble and Balance



SOUND

Bass	+ 8	◀ ● ▶
Treble	0	◀ ● ▶
Balance	0	◀ ● ▶
Speaker		◀ On ▶

EXIT : To exit


- 1 Press **MENU** and ◀ or ▶ to select **SOUND**.
- 2 Press ▼ to highlight **Bass**, **Treble** or **Balance** and ◀ or ▶ to change the setting.

When connecting to a Hi-fi unit, set the **Speaker** option to **Off**. Then select **Fixed** or **Variable** for the **Audio output** in the **AV connection** menu.


Stereo and Bilingual transmissions

If stereo or dual language broadcasts are transmitted the word Stereo or Dual will appear on the screen each time programme positions are changed, disappearing after a few seconds. If the broadcast is not in stereo the word Mono will appear.

Stereo... Press  to select **Stereo** or **Mono**.


Bilingual... Bilingual transmissions are rare. If they are transmitted the word **Dual** will display. Choose the required programme number and if the word **Dual** appears press  to select **Dual 1**, **Dual 2** or **Mono**.

Widescreen viewing

Depending on the type of broadcast being transmitted, programmes can be viewed in a number of formats. Press the  button repeatedly to select between **Super live**, **Cinema**, **Subtitle**, **14:9**, **Wide** and **4:3**. Please note: Whenever the **MENU** button is pressed the picture size setting will change while the menus are ON the screen. This is to ensure that the menus do not overlap the edges of the viewable area.

SUPER LIVE

This setting will enlarge the image to fit the screen by stretching the image horizontally, holding the correct proportions at the centre of the image. Some distortion may occur.

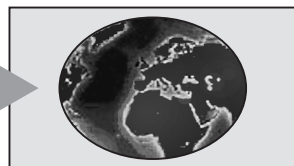

CINEMA

When watching 'letterbox format' films/video tapes, this setting will eliminate or reduce the black bars at the top and bottom of the screen by zooming in and selecting the image without distortion.




SUBTITLE

When subtitles are included on a letterbox format broadcast, this setting will raise the picture to ensure that all the text is displayed.




14:9

Use this setting when watching a 14:9 broadcast.

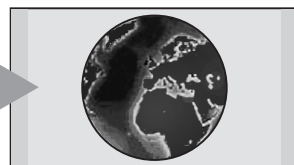


WIDE

Use this setting when watching a widescreen DVD, widescreen video tape or a 16:9 broadcast (when available). Due to the range of widescreen formats (16:9, 14:9, 20:9 etc.) black bars may be visible on the top and bottom of the screen.

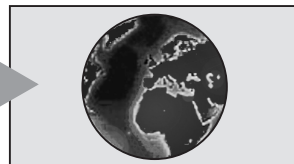

4:3


Use this setting to view a true 4:3 broadcast.

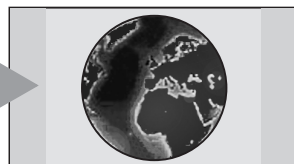

Using the special functions to change the size of the displayed image (i.e. changing the height/width ratio) for the purposes of public display or commercial gain may infringe on copyright laws.


Picture controls

Picture preferences

This television offers the choice of personalising the picture style. Press  to view the different styles available:

Picture mode-1 to 3 are preset options and **Picture mode-M** stores your own settings:

- 1 Select the **PICTURE** menu.

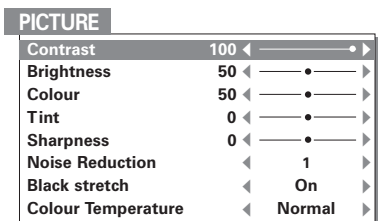



EXIT : To exit

- 2 Use  or  to adjust the **Contrast**, **Brightness**, **Colour**, **Tint** and **Sharpness**.

The **Tint** can only be adjusted on an NTSC signal from an NTSC video recorder or DVD player when the television is in **AUTO** or **NTSC** colour mode.




NR – Noise Reduction


Noise Reduction enables you to 'soften' the screen representation of a weak signal to reduce the noise effect.

- 1 Select **Noise Reduction** from the **PICTURE** menu. Use  or  to adjust. The differences may not always be noticeable (for the best result use lower settings as picture quality can be lost if the setting is too high).

Black Stretch

Black Stretch increases the strength of dark areas of the picture which improves the definition.

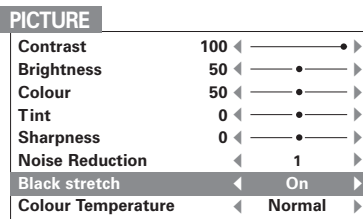


- 1 In the **PICTURE** menu press  until **Black Stretch** is highlighted.
- 2 Press  or  to select between **On** and **Off**. The effect depends on the broadcast and is most noticeable on dark colours.




EXIT : To exit

Colour Temperature

Colour Temperature increases the 'warmth' or 'coolness' of a picture by increasing the red or blue tint.

- 1 In the **PICTURE** menu press  until **Colour Temperature** is highlighted.
- 2 Press  or  to select between **Normal**, **Warm** and **Cool** to suit your preference.

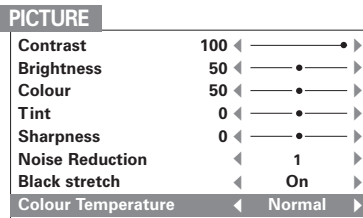

EXIT : To exit

WARNING! NEVER LEAVE A STATIONARY IMAGE ON THE SCREEN


Picture controls continued

Convergence

On this television the red, green and blue images are projected separately onto the screen. They converge to form full colour and when they converge correctly you will see a clear picture. It is especially apparent when viewing cartoons. The green is fixed and therefore not adjustable. The red and blue are factory set and should need little or no adjustment. However, convergence may drift over time or if the television is moved.

Select a television channel and let the television warm up for at least 30 minutes before realigning the colours...

- 1** In the **SET UP** menu press **▼** until **Convergence** is highlighted. Press **▶**.
- 2** If the white cross in the centre of the screen has a RED 'shadow' press the RED button and **◀** or **▶** and **▲** or **▼** until the RED 'shadow' disappears. If there is a BLUE 'shadow' press the BLUE button and **◀** or **▶** and **▲** or **▼**. Adjust the RED and BLUE until only the white cross is visible.

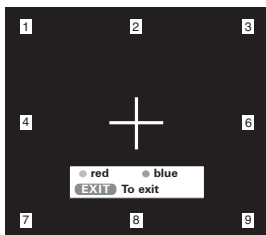

- 3** If the edges of the screen are not correct, select the numbers in turn e.g. number 1 selects the top left hand corner of the screen, the number will be replaced by a white cross, repeat **step 2**.
- 4** Press **EXIT** to go back to the television screen and check the picture. If more adjustment is needed, simply repeat **steps 1** and **2**.

It will be necessary to adjust the convergence for each widescreen format.

Picture position

The picture position may be adjusted to suit personal preference and can be particularly useful for external inputs.

- 1** Select the **SET UP** menu.

The options alter depending on the widescreen format chosen and when viewing connected equipment.

In **Cinema**:

SET UP	
Language	◀ English ▶
Country	◀ UK ▶
Auto tuning	▶
Manual tuning	▶
Programme sorting	▶
AV connections	▶
Horizontal position	◀▶
Vertical position	◀▶
Convergence	▶

- 2** Press **▼** to select an option, then **◀** or **▶** to adjust the settings.

Automatic format (Widescreen)

When this television receives a true Widescreen picture and **Auto format** is **On**, it will automatically be displayed in Widescreen format, irrespective of the television's previous setting.

- 1** Select **Auto format** from the **FEATURE** menu, then select **On** or **Off**.



FEATURE	
Teletext	◀ Auto. ▶
Panel lock	◀ Off ▶
Auto format	◀ On ▶
Blue screen	◀ On ▶

EXIT : To exit

Still picture

This television's 100Hz double scanning plus digital picture processing produces a flicker-reduced picture. In addition, a still image can be held on the screen.

- 1** Press **⏸** to hold an image on the screen. Press **⏸** again to cancel.

The timer, time display, panel lock, blue screen

The Timer

The television can be set to turn itself **On** or **Off** after a certain time.

- 1 Press **MENU** and **<** or **>** to select the **TIMER** menu.



TIMER

Off timer	00:00
On timer	00:00 P01

0 - 9 : To set
EXIT : To exit

- 2 Press **✓** to select **On** or **Off timer**. Use the number buttons to set the required time. For example, to switch the television off in one and a half hours enter 01:30, or press **OK** to increase/decrease in steps of 30 minutes.

- 3 If setting the **Off timer**, press **EXIT** to finish. When the **Off timer** is set and there is one minute remaining before the television turns off, a reminder will appear on the screen e.g. **Off timer / 59** indicating that there are 59 seconds left. To cancel the reminder display press **EXIT**.

If setting the **On timer** enter the programme position number required, then press **⏻** to put the television into Standby. The GREEN On timer indicator on the front of the television will now be lit.

Any equipment connected with SCART leads must also be put into Standby to prevent them from being displayed when the timer switches on.

Once the **On timer** has been set the television can be switched on at any time by pressing **⏻**. The Green On timer indicator will remain on until the set time period as passed when the television will go to the chosen channel. This feature can help to avoid missing favourite programmes.

- 4 To cancel the **On timer**, enter zero in each position including the programme position.

The Time Display

The time display facility allows the current (teletext) time to be seen on the television screen.

Press **Ⓜ**/**ⓧ** whilst watching a normal television broadcast to see a time display from the broadcaster.

It will remain on screen for about 5 seconds.

Panel lock

Panel lock disables the buttons on the side/front of the television. All buttons on the remote control can still be used.

- 1 From the **FEATURE** menu select **Panel lock** and choose **On** or **Off** using **<** or **>**.

FEATURE

Teletext	◀	Auto.	▶
Panel lock	◀	On	▶
Auto format	◀	On	▶
Blue screen	◀	On	▶

EXIT : To exit

When **Panel lock** is **On**, a reminder will appear when any of the side/front panel buttons are pressed. Once the television has been switched off it can **ONLY** be brought out of standby using the remote control.

Blue screen

When no signal is being received, the television will turn off the sound and switch the television screen to blue. After 15 minutes the television will switch to Standby mode.

- 1 From the **FEATURE** menu select **Blue screen** and choose **On** or **Off** using **<** or **>**.


FEATURE

Teletext	◀	Auto.	▶
Panel lock	◀	On	▶
Auto format	◀	On	▶
Blue screen	◀	On	▶

EXIT : To exit

Input selection and AV connections







Defining the INPUT and OUTPUT sockets so that the television recognises connected equipment. See page 6 for a clear view of the back connection recommendations.

Most VCRs and decoders send a signal through the SCART lead to switch the television to the correct *Input* socket. Alternatively press the external source selection button  until the picture from connected equipment is shown.

An **S** in the display e.g. **EXT3S (EXT 3S)**, indicates the input is set for an S-Video signal.




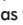
Input selection

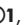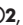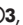Use the Input Selection if the television does not switch over automatically.

- 1 Press  to select , , , or  (**EXT 1-4**).
- 2 To return to television mode press  again or one of the numbered buttons.

INPUT signal selection

This specifies the type of signal going into SCART 3 (**EXT3**) on the back of the television. Please refer to the manufacturers instructions for the connected equipment.

- 1 In the **SET UP** menu press  until **AV connection** is highlighted, then press . With  or  select either **AV** or **S-VIDEO** as the required **input** for **EXT3**.

If the colour is missing try the alternative setting.

AV connection

EXT3 input	◀	AV	▶
EXT3 output	◀	EXT1	▶
Woofer	◀	Int.	▶
Audio output	◀	Fixed	▶

EXIT : To exit

OUTPUT signal selection for SCART 3

This enables selection of the source to *output* from SCART 3. For example, to record transmissions in stereo from a stereo decoder – connect a stereo decoder to SCART 1 and stereo VCR to SCART 3, then select **EXT 1** as the **EXT3 output**. The signal received through SCART 1 will output directly through SCART 3.

- 1 Select **AV connection**.

AV connection

EXT3 input	◀	AV	▶
EXT3 output	◀	EXT1	▶
Woofer	◀	Int.	▶
Audio output	◀	Fixed	▶

EXIT : To exit

- 2 Use  or  to change the **EXT3 output** option to:

Monitor = The picture on screen.

TV = The last television programme selection.

EXT1 = The picture from equipment connected to SCART 1.

EXT2 = The picture from equipment connected to SCART 2.

EXT4 = The picture from equipment connected to the front/side input sockets.

Teletext – setting up, general information, Auto. and LIST modes

This television has a multi-page teletext memory, which takes a few moments to load. It offers two **Modes** of viewing text – **Auto** will display **Fastext**, if available. **LIST** will store your four favourite pages.

Selecting Modes



The teletext character set will be automatically chosen by the language setting in the **SET UP** menu.

- 1 Select **Teletext** from the **FEATURE** menu.
- 2 With **<** or **>** choose **Auto.** or **LIST** then press **EXIT**.

FEATURE	
Teletext	Auto.
Panel lock	Off
Auto format	On
Blue screen	On
EXIT : To exit	

Teletext information

The / button:

To view teletext press / . Press again to superimpose the teletext over a normal broadcast picture and again to return to normal viewing. Programmes cannot be changed until teletext is cancelled.

The first text page shown will be the *initial* page.



In **Auto.** mode this displays the main subjects available and their relevant page numbers.

In **LIST** mode this displays whichever page number is currently stored on the **RED** button.

In either mode any teletext page can be accessed by entering the 3 digit page number using the numbered buttons, pressing the coloured buttons or pressing **P ▲** (▲) to advance to the next page and **P ▼** (▼) to go back to the previous page.

Sub-pages

If there are sub-pages they will automatically load into memory without changing the page on screen. When all available sub-pages have loaded the page number in the top left hand corner will change from white to yellow.

To access the sub-pages press (-). The page number will be replaced by pink sub-page numbers, use **<** and **>** to view them. Any additional sub-pages will load automatically. To alter the page selection the sub-pages must be switched off by pressing (-).

These sub-pages will remain available to view until another page is chosen or, in normal TV mode, the channel is changed.

Navigating pages using Auto.

If **Fastext** is available four coloured titles will appear at the base of the screen.

To access one of the four given subjects, press the relevant coloured button on the remote control.

For further information on your particular text system(s), see the broadcast teletext index page or, consult your local Toshiba dealer.

Navigating pages using LIST

The four coloured choices at the bottom of the screen are numbers – 100, 200, 300 and 400, which have been programmed into the TV's memory. To view these pages press the relevant coloured buttons.

To *change* these stored pages press the relevant coloured button and enter the 3 digit number. This number will change in the top left of the screen and in the coloured highlight.

Press **OK** to store. The bars at the bottom of the screen will flash white. **Whenever OK is pressed all four page numbers showing at the bottom will be stored and the previous ones will be lost.**

If **OK** is not pressed the selection will be forgotten when teletext is cancelled.

Other pages may be viewed by entering the 3 digit page number – but **DO NOT** press **OK** or these pages will be stored.

Teletext continued


– control buttons

Below is a guide to the functions of the remote control teletext buttons.




To display an index/initial page:

Auto.


Press  to access index pages. The one displayed is dependant on the broadcaster.

LIST

Press  to return to the index/initial page.



To display a page of teletext:

Press  to display teletext. Press again to superimpose teletext over a normal broadcast picture. Press again to return to normal TV viewing. Programmes cannot be changed until you return to normal TV.




To access sub-pages:

For use with  and  to view sub-pages when available.


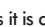


To reveal concealed text:

To discover the solutions on quiz and joke pages press the  button.




To hold a wanted page:

At times it is convenient to hold a page of text. Press  and  will appear in the top left of the screen. The page will be held on screen until the button is pressed again.





To enlarge the teletext display size:



Press  once to enlarge the top half of the page, press again to enlarge the bottom half of the page. Press again to revert to normal size.



To select a page whilst viewing a normal page:

Enter the page number then press , a normal picture will be displayed. The TV will indicate when the page is present by displaying the page number at the top of the screen. Press  to view the page.

To display news flashes:

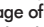Select the news flash page for the chosen teletext service (see the index page of teletext service). Press . The news flashes will be displayed as and when they are broadcast. Press  again to cancel the display.

The news flash page must be cancelled before changing programmes.



**Remember to cancel teletext
before changing channels
– press the  button twice.**

Questions and Answers



Below are the answers to some of the most common queries.
For more information go to www.toshiba.co.uk

Q Why are there distorted images/faded colours?

A This is sometimes due to condensation if the room temperature rises rapidly or the television is moved from a cold room to a warm room. Leave the television turned on for a while this should improve the images.

Q Why is there no sound or picture?

A Check the mains switch is on and check all connections.
Check the television is not in standby mode.

Q There is a picture, but why is there little or no colour?

A When using an **external** source, for instance, a poor quality video tape, if there is little or no colour, improvements may sometimes be achieved. The colour is factory set to **Auto.** to automatically display the best colour system.

To check that you have the best colour:

- 1 With the external source playing, select **Manual setting** from the **SET UP** menu.

Manual setting

Colour	:	Auto.
EXT 2	A	DVD

OK	:	To store
MENU	:	To return
EXIT	:	To exit

- 2 With **<** or **>** choose between **Auto.**, **PAL**, **SECAM**, **NTSC 4. 43** or **3. 58**.

Q Why doesn't the video/DVD being played show on screen?

A Make sure the VCR or DVD player is connected to the television as shown on page 6, then select the correct input by pressing **↻**.

Q Why is there a good video picture but no sound?

A Check the SCART lead connection.

Q Why is there a picture but no sound?

A Check the volume has not been turned down or that sound mute has not been selected.

Q Why is the VCR/DVD picture in black and white?

A Check the correct **input** has been chosen, **S-VIDEO** or **AV**. See **AV connection**.

Q What else can cause a poor picture?

A Interference or a weak signal. Try a different television station. **Manual fine tuning** may help.

Q Why doesn't the remote control work?

A Check the side switch on the remote control is in television mode.
Check the batteries aren't dead or inserted incorrectly.

Q Why don't the controls on the side/front of the television work?

A Check that **Panel lock** is not **ON**.

Q Why is there a message permanently on the screen?

A Remove it by pressing **CALL**.

Questions and Answers continued


Q Why is there no sound from my connected sound equipment?

A Check the **Speaker** option in the **Sound** menu is set to **Off**.

Q Why are there problems with teletext?

A Good performance of text depends on a good strong broadcast signal. This normally requires a roof or loft aerial. If the Text is unreadable or garbled, check the aerial. Go to the *main index* page of the teletext service and look for the *User Guide*. This will explain the basic operation of teletext in some detail. If further information is needed on how to use text see the *teletext* section.

Q Why are there no teletext sub-pages?

A There are none broadcast or they have not yet loaded. Press the  button to access. (See teletext section).

Q Why are the colours wrong when an NTSC source is played?

A Connect the source via a SCART lead and play. Select **Manual setting** from the **SET UP** menu.

Manual setting

Colour : Auto.

EXT 2

A

DVD

OK : To store

MENU : To return

EXIT : To exit

1 Set the Colour to **Auto**. Press **OK** to store.

2 Go to the **Picture** menu and adjust the tint.

Notes

For your own records

Specifications and accessories

Broadcast systems/channels

PAL-I	UHF	UK21-UK69
PAL-B/G	UHF	E21-E69
	VHF	E2-E12, S1-S41
SECAM-L	UHF	F21-F69
	VHF	F1-F10, B-Q
SECAM-D/K	UHF	R21-R69
	VHF	R1-R12

Video Input PAL, SECAM, NTSC 3.58/4.43

External connections

EXT1	Input	21-pin SCART	RGB, A/V
EXT2	Input	21-pin SCART	RGB, A/V
EXT3	Input/Output	21-pin SCART	A/V, S-video Selectable output
EXT4	Input (side/front)	4-pin Phono jack Phono jacks	S-video Video Audio L + R
Fixed/Variable Output		Phono jacks	Audio L + R
Output to Active Super Woofer		Phono socket	

Programme Positions	100
Stereo	Nicam 2 carrier system
Visible Screen Size (approx.)	42WH 106cm 51WH 129cm
Display	16:9
Sound output (at 10% distortion)	Main 14W + 14W

Power consumption 42WH 160W
as specified in EN60107-1 : 1997 51WH 160W

Standby 42WH <2.5W
51WH <2.5W

Dimensions 42WH 116cm (H) 101cm (W) 42cm (D)
(approx.) 51WH 128cm (H) 121cm (W) 57cm (D)

Weight (approx.) 42WH 52kg
51WH 65kg

Headphone socket 3.5mm stereo

Accessories Remote control
2 batteries
(UM-4, AAA, IEC R03 1.5V)



Printed on recycled paper. 100% Chlorine free.

© Toshiba Information Systems (U.K.) Limited

All rights reserved.

Reproduction in whole or part without written permission is strictly prohibited.

Toshiba Information Systems (U.K.) Limited

Consumer Products Division,
European Service Centre,
Admiralty Way, Camberley,
Surrey, GU15 3DT, UK

Specification is subject to change without notice.
Originated by Kensa Creative Solutions, Saltash, Cornwall.

42/51WH46
2356 6300